




Content Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

INDUSTRY 4.0 PACKAGE

 PC-LINK WEB (P) - COIL







Content Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB (P) - COIL

EASY TO INSTALL. EASIER TO USE.

PC-LINK WEB P - COIL

ALLOWS TO MONITOR, COLLECT DATA AND CONTROL THE WHOLE PRODUCTION OF THE COIL WINDING MACHINES PARK, WHICH CAN BE NOT NECESSARILY HOMOGENEOUS.

PC-LINK WEB P - COIL

IT IS A UNIQUE INDUSTRY 4.0 REMOTE PROGRAMMING, MONITORING AND EVALUATION TOOL. THIS SMART WIRE FEEDING SOFTWARE HAS BEEN CREATED TO EASE THE PROGRAMMING OF BTSR PRODUCTS BY MEANS OF A VERY INTUITIVE INTERFACE, THUS ALLOWING ON SITE MONITORING, QUALITY CHECK, PRODUCTION MONITORING AND FORECAST ANALYSIS.

PC-LINK WEB P - COIL

ALL TRACED DATA CAN BE STORED EITHER ON A LOCAL (STAND-ALONE PC, THROUGH ACCESS DATABASE) OR ON YOUR COMPANY DISTRIBUTED (SQL SERVER - SAP ETC) DATABASE

IT IS ALSO FULLY COMPATIBLE WITH IOS AND ANDROID DEVICES AS IT'S BASED ON WEB TECHNOLOGY










 
Content Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB (P) - COIL

EASY TO INSTALL. EASIER TO USE.

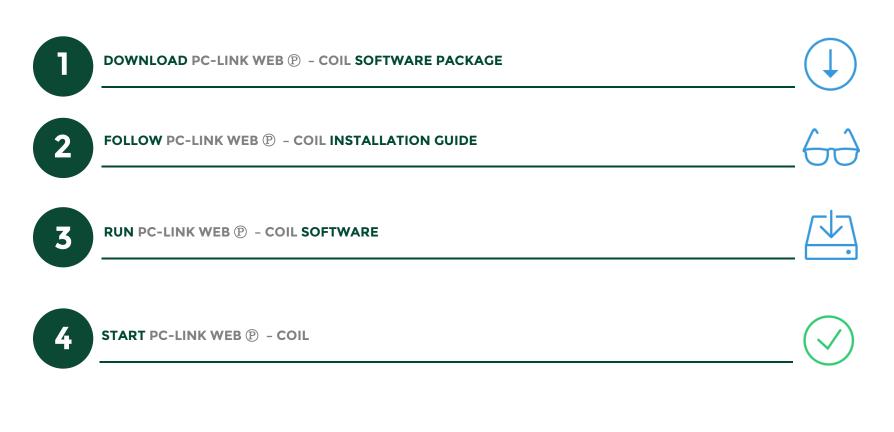





FACTORY

- ITALY
 - RELAY

LINE1

LINE2

- ▶ IGNITION
- GERMANY
- ▶ USA



Contact us

Content Content Conte

Email: enquiry@ingridwest.co.uk

FROM MACRO

TO MICRO





Left Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB P - COIL

MACRO: FACTORY DATA.

As MACRO FEATURES, PC-LINK WEB (P) - COIL displays:

- 1. MACRO OVERVIEW, PC-LINK WEBP-COIL shows the layout of your company with an intuitive menu.
- 2. EASY NAVIGATION, through each production area to every single machine
- 3. INTUITIVE GRAPS, PC-LINK WEB (P) COIL shows both the efficiency/inefficiency and type of pieces produced at your factory as of every single production room.
- 4. REAL TIME MONITORING, a Quick Menu help having an instant of the production efficiency as well.
- 5. GO INTO DETAILS, at every time an Advance Menu is available to better manage your production (creating, editing and managing both BTSR products, groups and style on each machine, working shifts, general settings, users privileges...)







Content Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB P - COIL

MACRO: MACHINE DATA.

As MACRO OVERVIEW, PC-LINK WEBP-COIL allows to go deeper to each machine (1) having a complete analysis both of the stopping state and running state of the machine itself. PC-LINK WEB COIL, displays both the efficiency/inefficiency and the type of pieces produced by the machine with the same graphics shown on the top level of your factory. A history of the machines performance through the working shifts (3) is also available with a trend and bar charts.








Content Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB P - COIL

MICRO: MACHINE DATA.

As MICRO OVERVIEW, PC-LINK WEB®-COIL allows also to have complete overview of each position analysing every single BTSR device installed on the machine. The resulting table (4) focuses on functional parameters such to calculate the real length of wire absorbed by the machine (BTSR LWA) with its correlated weight thus to have the possibility to monetise the wire you're utilising comparing it to the one you're wasting. PC-LINK WEB COIL, comes as standard with another simple graph (5) of the textile machine with all the BTSR products installed in order to better interact with the machine.

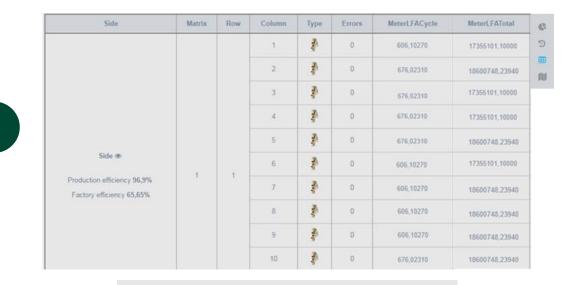







L Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB P - COIL

QUALITY: MACHINE DATA.

As QUALITY OVERVIEW, PC-LINK WEB[®]-COIL allows also to have complete overview of each LWA position analysing every single BTSR device installed on the machine. The resulting table shows the real length of wire absorbed by each coil produced (BTSR LWA) thus guaranteeing a very stable coil quality production.







C Tel: +44 (0) 1684 273164

Email: enquiry@ingridwest.co.uk

PC-LINK WEB P - COIL


ADVANCED FEATURES

Through the ADVANCED MENU, PC-LINK WEBP-COIL allows different type of operations according to the user role.

From Global Settings (colours, interface, languages...) to Users roles Management Settings (add users, define roles...).

From Style Management (create and configure working styles for each machine) to Factory Management Settings (organise your daily/weekly/monthly/yearly factory working shifts setting up each machine)

There are many features to be configured in order to start monitoring, collecting and controlling your production quality.

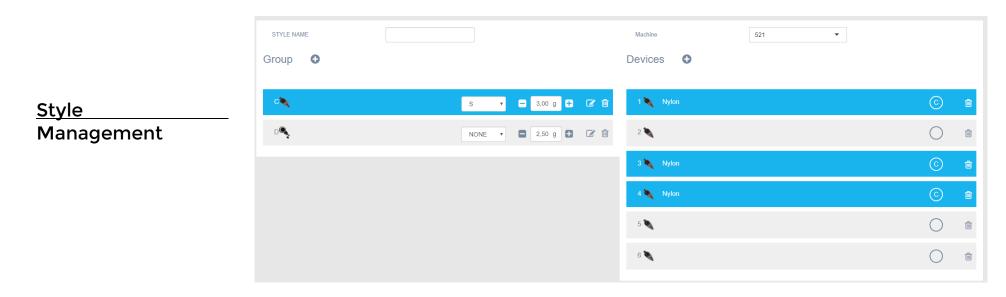

Create a style group adding BTSR devices and setting working parameters





Content Content Conte

Email: enquiry@ingridwest.co.uk

 $\textbf{PC-LINK WEB} \ \textcircled{P} \textbf{-} \textbf{COIL}$

CONTROL YOUR FACTORY. EVERYWHERE.

EVERYTIME.



